



Installation Instructions for the Color Change Film Display Board

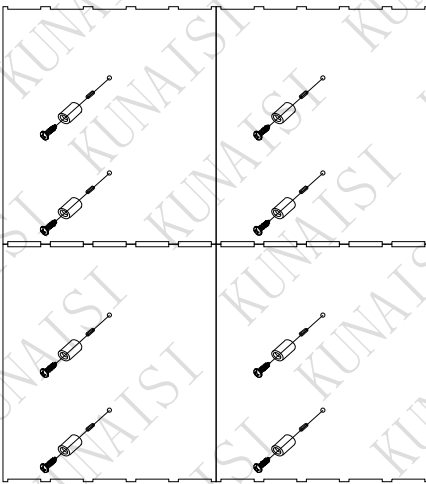

1. First, use the positioning paper to find a suitable wall surface and mark the hole positions.
2. Drill holes at the marked positions.
3. Insert the rubber plugs into the holes.
4. Secure the base of the advertising nail to the wall with screws.

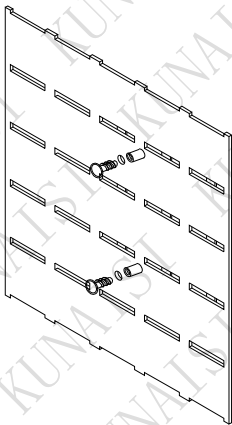

5. Then screw the color switch board onto the wall.


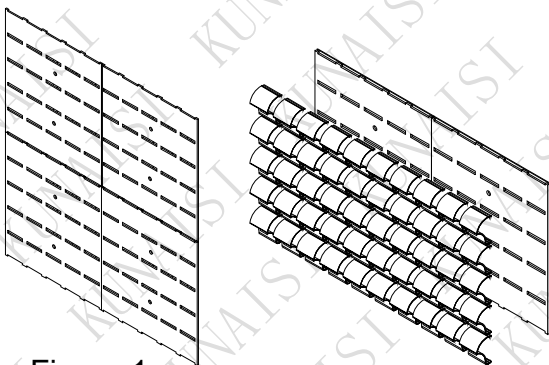


Figure 1

6. Assemble according to the placement order shown in Figure 1.
7. Once step 6 is completed, you can attach the color switch pieces to the board.

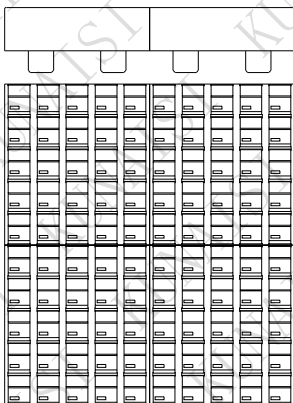

8. Insert the top advertisement to complete the installation.